


A. Sedan


Removal

1 Push safety hook up to stop toward the rear and lift rear seat at the front.

2 Lift rear seat cushion in upward direction (center armrest should not be folded out).

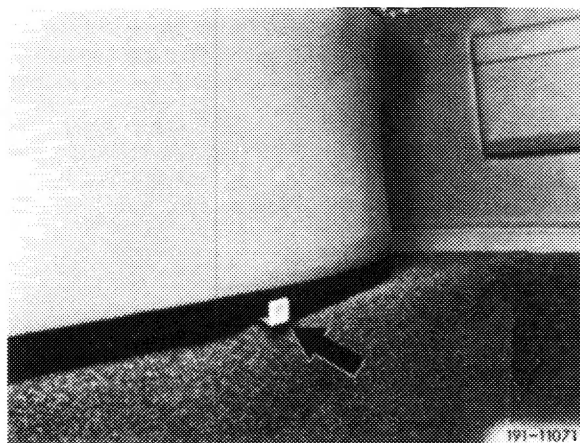


3 Remove screws at rear seat backrest left and right.

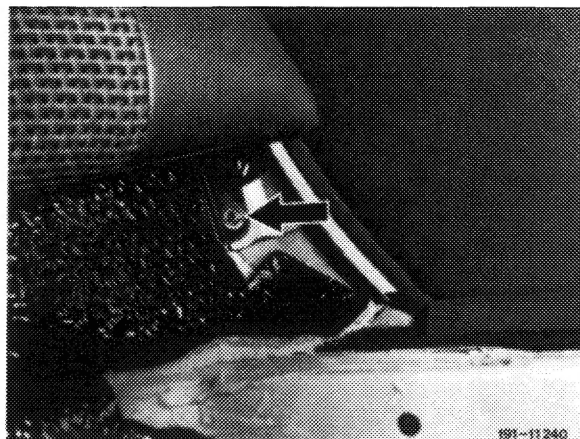


4 Pull out center armrest and remove screw behind.

5 Lift rear seat backrest in upward direction.

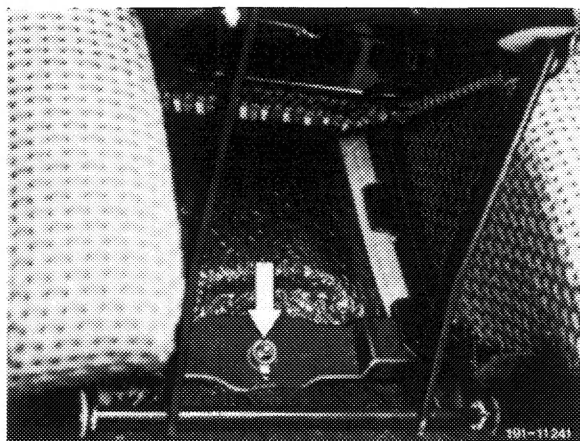


Installation

6 For installation proceed vice versa, making sure that the rear seat backrest is attached to all the three loops.

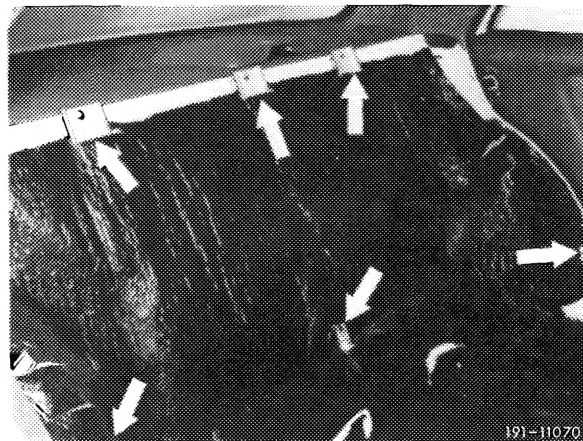



7 Slide rear seat cushion with rear edge up to stop under rear seat backrest and push down until seated at the front.

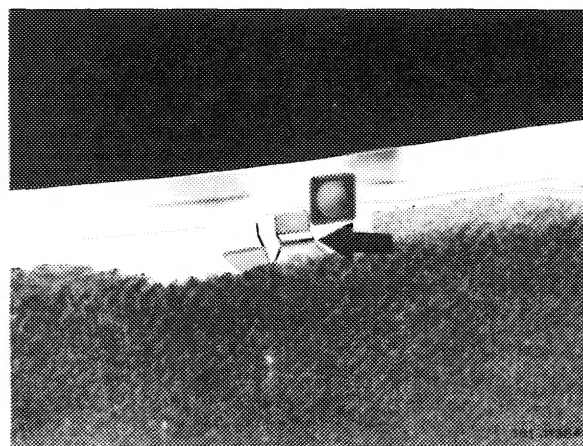


B. T-Sedan

Removal


- 1 Push locking lever down and fold rear cushion up.
- 2 Push red safety button at left and right on bottom of rear seat cushion in upward direction and remove cushion (arrow).

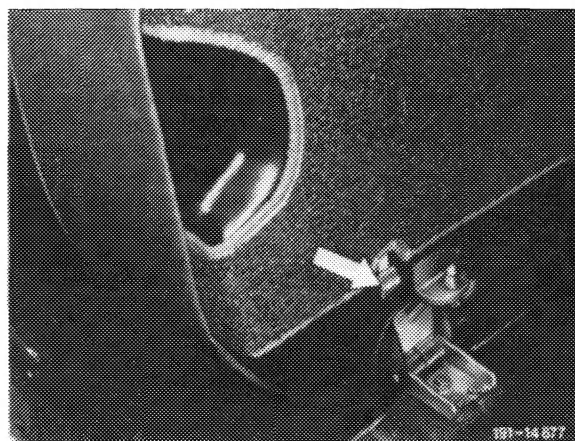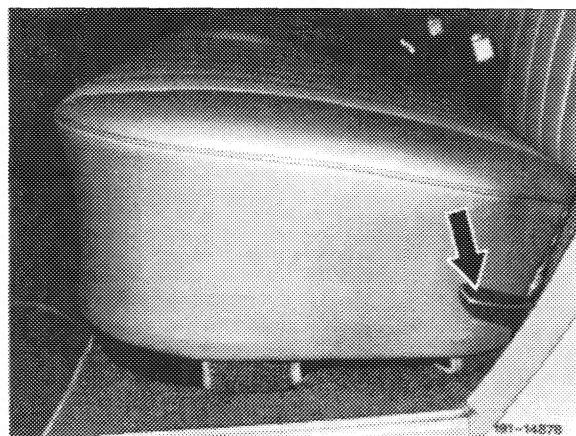

- 3 Push out cover at left and right adjacent to rear seat backrest by means of a plastic wedge.

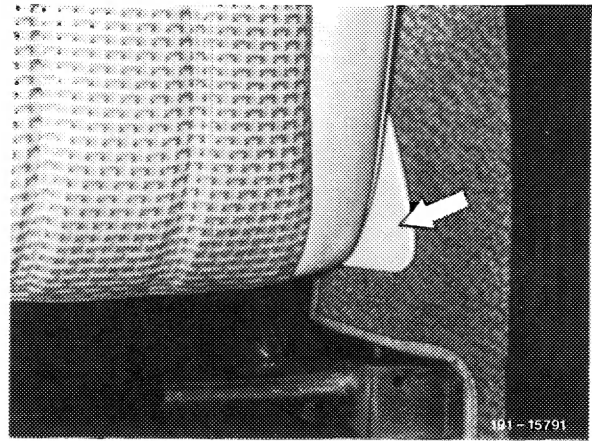

- 4 Unscrew fastening screws at left and right on rear seat backrest and pull out backrest in upward direction.

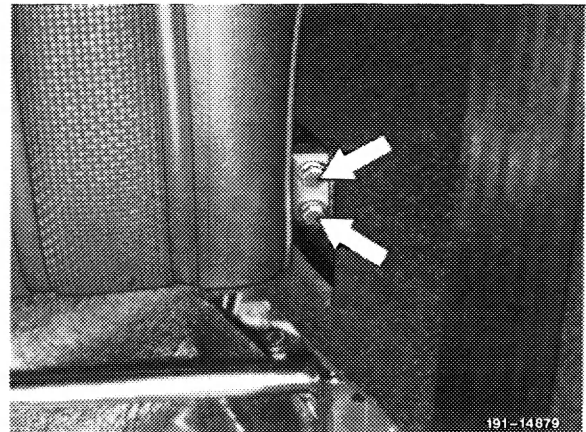

Installation

- 5 Install rear seat backrest.
- 6 Push rear seat cushion into both folding hinges and engage.

